



Through Stand Cable Assembly 3 2 1 SCREW THE BOTTOM PLATE TO REMOVE FRONT COVER. ROUTE CHARGING THE WALL / COUNTER USE T-20 TORX CABLE THROUGH WITH PHILLIPS ROUND HEAD WRENCH (PROVIDED) MOUNT AS SHOWN SCREWS - TYPE 10 X 1 1/2" (PROVIDED). TO REMOVE M4 X 10mm TORX FLAT HEAD SCREWS NOTE: IN A WOOD STUD INSTALATION ENSURE AT LEAST TWO VERTICALLY ALIGNED SCREWS ARE SECURED INTO THE STUD. 5 4 6 **ROUTE CHARGING** PLACE BOW MOUNT OVER BOTTOM PLATE ROUTE CHARGING CABLE CABLE THROUGH AND INSTALL USING 2 M4 X 10mm THROUGH ENCLOSURE OR VESA MOUNT. TORX FLAT HEAD SCREWS AND WRENCH (PROVIDED). MOUNT AS SHOWN **INSTALL TO MOUNT USING M4 X 8mm** INSTALL RUBBER PLUGS. PHILLIPS PAN HEAD SCREWS (PROVIDED)

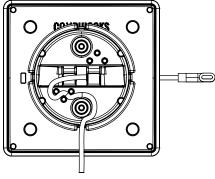

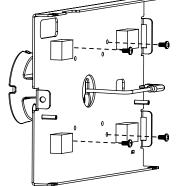


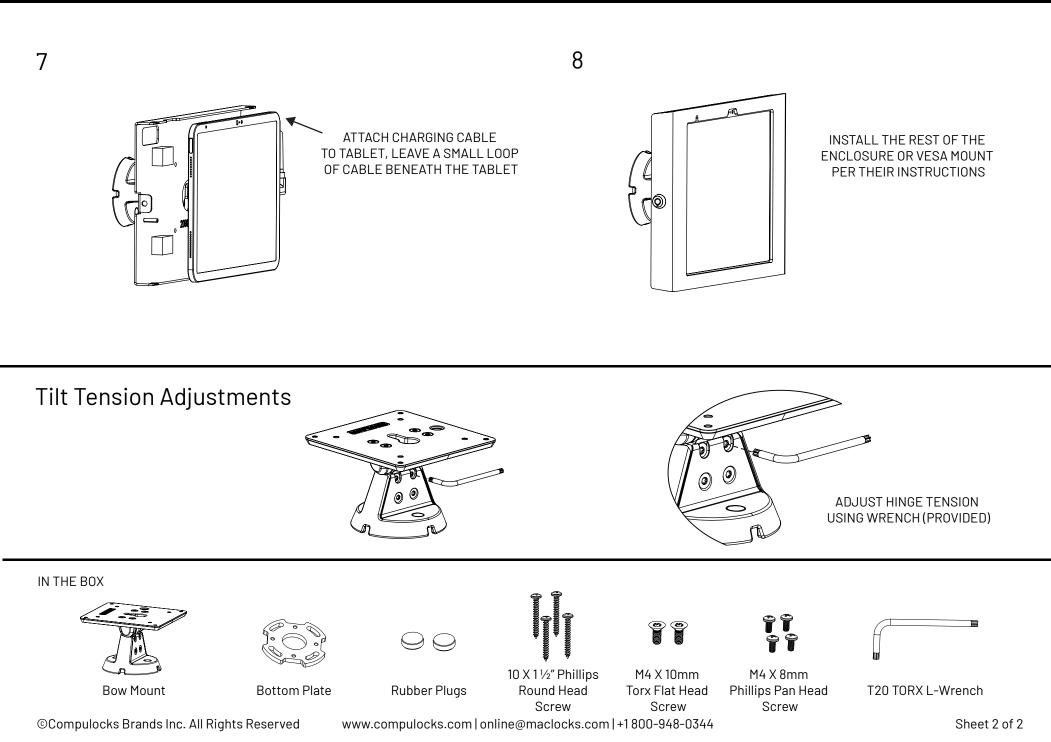

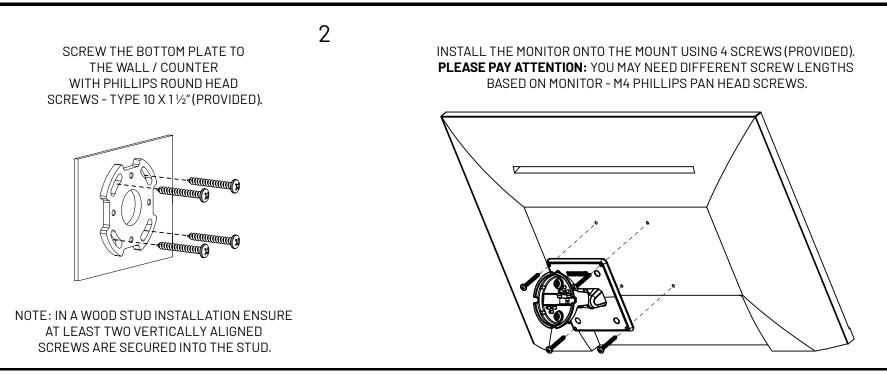

3

1

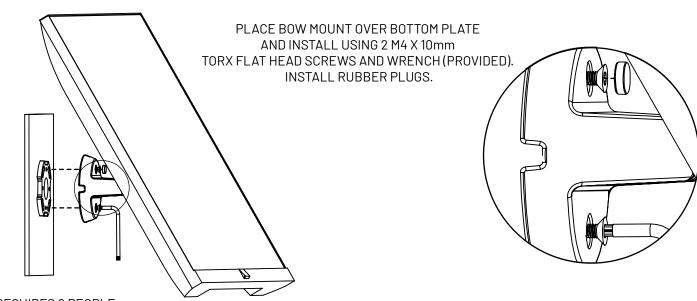



NOTE: INSTALLATION REQUIRES 2 PEOPLE.

©Compulocks Brands Inc. All Rights Reserved

www.compulocks.com | online@maclocks.com | +1800-948-0344

Tilt Tension Adjustments

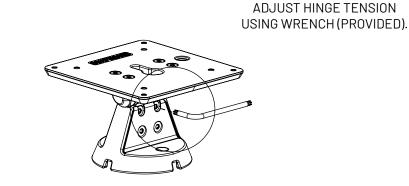

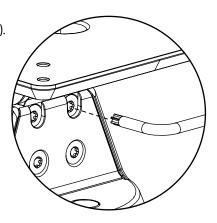



©Compulocks Brands Inc. All Rights Reserved

www.compulocks.com|online@maclocks.com|+1800-948-0344